

Battery Replacement

Digital Combination Locks 3780/2/4 Only

For full fitting, operating and
programming instructions
please visit www.euro-locks.de

Euro-Locks
Sicherheitseinrichtungen GmbH
Am Bruchwald 22
66280
Sulzbach/Neuweiler

T: + 49 (0) 6897 9072 0

F: + 49 (0) 6897 9072 99

E: vertrieb@euro-locks.de


W: www.euro-locks.de

378- Battery Replacement

To check if the batteries require replacement press LOGO button twice (three times with RFID versions).

Batteries require changing if RED light flashes.

If the RED light flashes immediately prior to unlocking, the batteries must be changed as soon as possible.

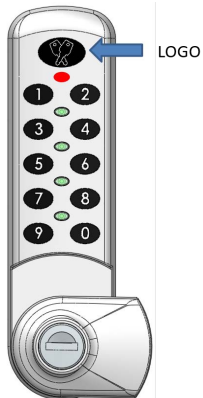

Instructions - Dry Area Locks Only

1. Enter USER code or Over-ride key to gain access to the rear of the door.
2. Remove two fixing screws.
3. Rotate lock as shown.
4. Replace Batteries.
5. Re-fit fixing screws

